

# Ficha técnica

Epson

## Modelos / familias

TM-T70II

## Fuente del fabricante

TM-T70II Technical Reference Guide

[https://files.support.epson.com/pdf/pos/bulk/tm-t70ii\\_trg\\_en\\_rev.d.pdf](https://files.support.epson.com/pdf/pos/bulk/tm-t70ii_trg_en_rev.d.pdf)

Las páginas siguientes son un extracto técnico del documento oficial del fabricante.

|                |    |
|----------------|----|
| Utilities..... | 65 |
| Download.....  | 66 |

## **Handling ..... 67**

|                                             |    |
|---------------------------------------------|----|
| ■ Installing and Replacing Roll Paper ..... | 67 |
| ■ Removing Jammed Paper .....               | 69 |
| ■ Cleaning the Thermal Head .....           | 69 |
| ■ Preparing for Transport.....              | 70 |

## **Replacement of the TM-T70..... 71**

|                                                                |    |
|----------------------------------------------------------------|----|
| ■ Compatibility .....                                          | 71 |
| Printing.....                                                  | 71 |
| Print Density.....                                             | 71 |
| Number of Head Energizing Parts.....                           | 71 |
| Printable Area (for 80 mm Width Paper/58 mm Width Paper) ..... | 71 |
| Cutting Method.....                                            | 72 |
| Manual Paper Feed .....                                        | 72 |
| Receive Buffer .....                                           | 72 |
| Memory Capacity .....                                          | 72 |
| Electrical Characteristics .....                               | 72 |
| DIP Switches.....                                              | 72 |
| Printer Status.....                                            | 72 |
| Logo Registration .....                                        | 73 |
| Driver Compatibility .....                                     | 73 |
| USB Power-Saving Function .....                                | 73 |
| Maintenance Counter .....                                      | 73 |
| Buzzer .....                                                   | 73 |
| Overall Dimensions.....                                        | 74 |
| ■ Additional Functions and Functional Improvements.....        | 75 |
| Print Speed.....                                               | 75 |
| Barcodes .....                                                 | 75 |
| Number of Characters.....                                      | 76 |
| Image Tone Setting .....                                       | 76 |
| Interface.....                                                 | 76 |
| USB Class.....                                                 | 76 |
| Coupon Printing.....                                           | 76 |
| Memory Switches .....                                          | 77 |
| R/E Information Print Mode .....                               | 77 |
| Reliability .....                                              | 78 |

## **Appendix..... 79**

|                                |    |
|--------------------------------|----|
| ■ Product Specifications ..... | 79 |
| Printing Specifications .....  | 80 |
| Character Specifications ..... | 82 |
| Printable Area .....           | 86 |

|                                                          |            |
|----------------------------------------------------------|------------|
| Printing and Cutting Positions .....                     | 88         |
| Paper Specifications.....                                | 88         |
| Electrical Characteristics .....                         | 90         |
| Environmental Conditions .....                           | 91         |
| External Dimensions and Mass.....                        | 92         |
| ■ <b>Option Specifications</b> .....                     | <b>93</b>  |
| AC Adapter (PS-180) .....                                | 93         |
| ■ <b>Specifications of Interface and Connector</b> ..... | <b>94</b>  |
| RS-232 Serial Interface .....                            | 94         |
| IEEE 1284 Parallel Interface .....                       | 97         |
| USB (Universal Serial Bus) Interface .....               | 100        |
| ■ <b>Character Code Tables</b> .....                     | <b>101</b> |

# Product Overview

This chapter describes features and specifications of the product.

## Features

The TM-T70II is a receipt printer with high speed printing and a small footprint. With its compact design, it can be placed in a narrow space, such as under a counter, and it also has full front access for easy operability.

---

### High speed printing

- Issuing of batch receipts is possible.  
Maximum print speed: 250 mm/s {9.84"/s} (200 mm/s {7.87"/s} for some models)
- Graphics are also printed with high-speed printing.
- Multi-tone graphic printing
- Coupon print function is supported.

---

### Front operation

- Easy drop-in paper loading
- Front access operation of the power switch and operation panel
- Front access operation for receipt ejection

---

### Software

- Command protocol is based on the ESC/POS Proprietary Command System.
- OPOS ADK and Windows printer driver are available.
- In addition to supporting several kinds of bar code printing, GS1-DataBar printing and two-dimensional symbol (PDF417, QR code, MaxiCode, Composite Symbology) printing are possible.
- Various layouts are possible by using page mode.
- A maintenance counter function is supported.
- Paper-saving function is supported.

---

### Environmental

- TM-T70II is ENERGY STAR qualified. (Some models may be exempted.)

---

### Others

- Various interface boards (EPSON UB series) can be used.
- The TM-T70II Software & Documents Disc (drivers, utility software, and manuals)

# Product Configuration

## Interface

- Serial interface model (RS-232)
- Parallel interface model (IEEE1284)
- USB interface model (full-speed)
- Ethernet interface model (100BASE-TX/10BASE-T)
- Wireless LAN interface model (IEEE802.11a/b/g/n)
- *Bluetooth* interface model (*Bluetooth* Ver.2.1 + EDR)



### CAUTION

**For this printer, never use a LAN interface board or a wireless LAN interface board with a buzzer function.**

Otherwise, the printer or the interface board may be damaged.

The name of interface boards with a buzzer function has "A" at the end.

Example) UB-E\*\*A, UB-R\*\*A (\*: alphanumeric character)

## Buzzer

- Model with the buzzer function
- Model without the buzzer function

### CAUTION

The optional external buzzer and the internal buzzer cannot be used together at the same time.

## Color

- ECW (Epson Cool White)
- EDG (Epson Dark Gray)

## Accessories

### Included

- Roll paper (for operation check)
- Power switch cover
- AC adapter\*
- AC cable\*

- Locking wire saddle\*
- The TM-T70II Software & Documents Disc (drivers, utility software, and manuals)\*
- Setup Guide
- Warranty certificate\*


\* May not be included depending on the model.

---

## Options

- AC adapter
- AC cable
- Connector cover (Model: OT-CC702W/OT-CC702B)  
Protects cables and interface connected to the printer.
- Affixing tapes for fixing the printer (Model: DF-10)
- Interface boards (UB series)
- Optional external buzzer (Model: OT-BZ20)

## Parts Name and Function

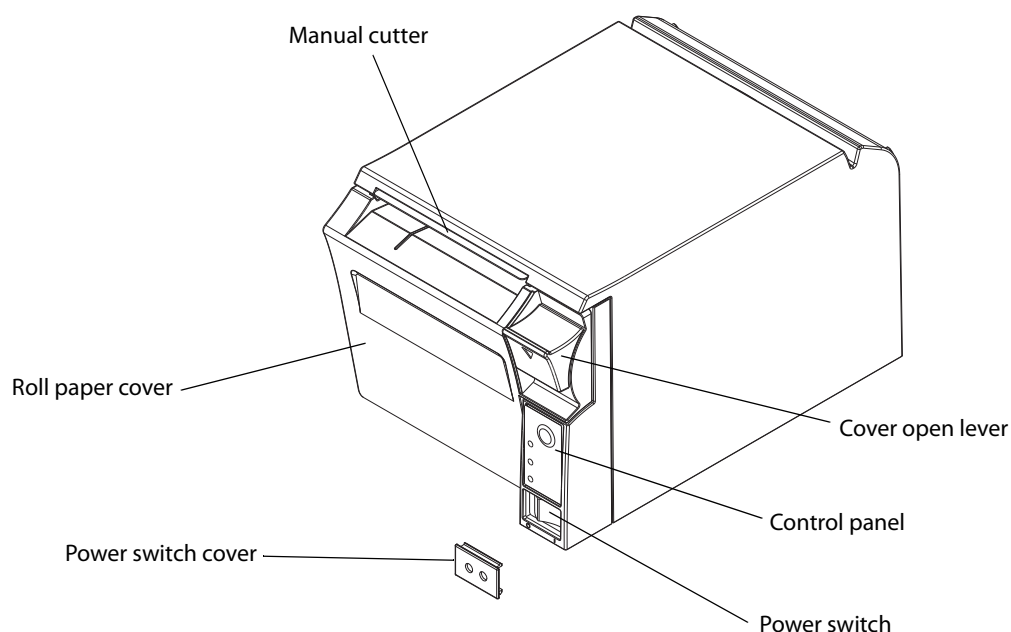

### Power Switch

Turns the printer on or off. The marks on the switch: (  / | )



**Before turning on the printer, be sure to check that the AC adapter is connected to the power supply.**

#### CAUTION

Before turning the printer off, it is recommended to send a power-off command to the printer. If you use the power-off sequence, the latest maintenance counter values are saved. (Maintenance counter values are usually saved every two minutes.)  
For detailed information about ESC/POS commands, see the ESC/POS Command Reference.

### Power Switch Cover

Install the power switch cover that comes with the TM-T70II onto the printer to prevent inadvertent changing of the power switch, to prevent tampering, and to improve the appearance of the printer.

To reset the printer when the power switch cover is installed, insert a long, thin object (such as the end of a paper clip) into the hole in the power switch cover and press the power switch.



**If an accident occurs with the power switch cover attached, unplug the power cord immediately.**

Continued use may cause fire or shock.