

Ficha técnica

Brother

Modelos / familias

PT-H110

Fuente del fabricante


User's Guide

https://download.brother.com/welcome/docp100243/pth110_use_ug_d0123y001_02.pdf

Las páginas siguientes son un extracto técnico del documento oficial del fabricante.

Symbol key

► Entering Symbols

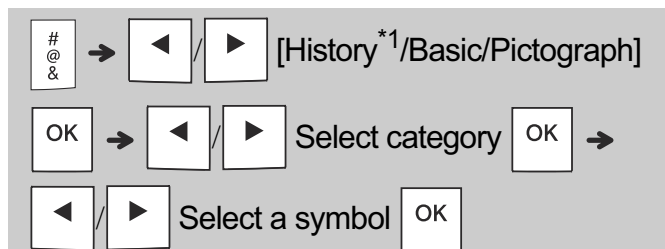

- See the table of symbols included in this insertion sheet.
- To cancel operations, press .
- ^{*1} When you select symbols, up to seven recently used symbols are added to History.
- If you choose History, you cannot select the category.
- You can also select from basic and pictograph categories by pressing the shortcut keys included in this insertion sheet.

► Basic

Punctuation	Space key	Unit	
Mathematics		Greek Letter	
Brackets		Number	
Arrows		Shape	

► Pictograph

Fun	Space key	Kitchen	
Smiley		Garden	
Clothing		DIY	
Vehicle		School	
Sports		Office	
Animal		Signs	
Holiday		Datacom/AV	
Food/Drink		Electrical	

Specifications

Dimensions: (W x D x H)	4.3" X 8.0" X 2.2" (Approx. 109(W) X 202(D) X 55(H)mm)
Weight:	Approx. 0.9 lb. (Approx. 400 g) (without batteries and tape cassette)
Power supply:	Six AAA alkaline batteries (LR03) Six AAA Ni-MH batteries (HR03) ^{*1} Optional AC adapter (AD-24ES/AD-24ESA/ AD-24ESAW/AD-24ESA-01/AD-24ESAW-01)
Tape cassette:	Brother P-touch TZe tape widths: 0.13" (3.5mm), 0.23" (6mm), 0.35" (9mm), 0.47" (12mm)

^{*1} Visit <http://support.brother.com/> for the latest information about the recommended batteries.


Accessories

Tape Cassettes:	See the included "Supplies and Accessories Guide".
AC Adapter:	AD-24ES/AD-24ESA/ AD-24ESAW/AD-24ESA-01/ AD-24ESAW-01
Cutter Unit:	TC-4 (replacement)

If the cutter blade becomes blunt after repetitive use and the tape cannot be cut cleanly, turn around the cutter board as shown in the illustration ①. If you still have the difficulties, replace with new cutter unit (stock no. TC-4) by obtaining from an authorized Brother reseller.

► Replacing the Cutter Unit

1. Pull out the two sections of the cutter unit (green) in the direction of the arrows shown in the illustration ②.
2. Install a new cutter unit. Push it in until it snaps into place.

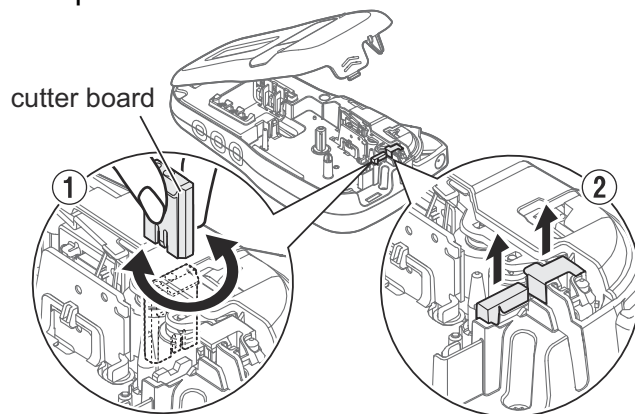

⚠ WARNING

Do not touch the cutter blade directly with your fingers.

Troubleshooting

► Error message

Message	Cause/Remedy
Battery Low!	The batteries are weak. If using AAA alkaline batteries: Replace them with six new AAA alkaline batteries. Do not use old and new batteries together or mix alkaline batteries with other battery types. If using Ni-MH batteries: Charge them fully.
Battery Empty!	The installed batteries are running low and need to be changed for continued operation.
Invalid!	- There is no text above the cursor when you selected [Numbering]. - You selected an invalid character for [Numbering]. - You selected an invalid number for [Label Length]. - You entered an invalid value as the label length while using templates.
No Text!	- You tried to print a text file when there is no data stored in the memory. - You pressed  when no text is entered. - You pressed  when no text is entered. - You pressed  or  when no text was entered while using templates.
2 Line Limit! 1 Line Limit!	- You tried to enter a 3rd line by pressing . - You tried to print or preview two lines of text while 0.13" (3.5mm) or 0.23" (6 mm) tape is installed. Install larger tape size.
No Cassette!	You tried to print, feed or preview a label when there is no cassette installed.
Cutter Pressed	You pressed the tape cutter lever in the middle of printing process.
Text Full!	You have already entered the maximum number of characters allowed (80 characters for text, 50 characters for templates. If your message contains symbols, the maximum number of characters could be reduced.).
Text Limit! Change Length	Since the number of entered characters exceeds the label length, reduce the text, or select [Auto] as the label length.
No Frame OK?	Printing on 0.13" (3.5mm) tape with invalid Frame setting ON. (Select  to print with no Frame,  to cancel.)
Feed OK?	Feeding tape after printing when [Chain Print] is selected. See "Setting Margin".
Insert 0.47"	Only 0.47"(12mm) tape cassette is available for templates.
Wrong Tape! Use TZe tape	Use a tape cassette with the  mark.

► What to do when...

Problem	Solution
The display stays blank after you have turned on the label maker.	- Check that you installed the batteries correctly with the positive and negative ends in the correct position. - If the batteries are weak, replace them with six new AAA alkaline batteries. Do not use old and new batteries together or mix alkaline batteries with other battery types. - Check that you connected the adapter correctly.
When the label is printed out, there is too much margin (space) on both sides of the text.	See "Setting Margin" in this users guide and select [Half] or [Narrow] to have smaller margins for your label.
The label maker does not print, or the printed characters are not formed correctly.	- Check that you have inserted the tape cassette correctly. - If the tape cassette is empty, replace it. - Check that you closed the cassette cover correctly.
The label maker's settings have cleared on its own.	- The batteries may be weak. Replace them with six new AAA alkaline batteries. Do not use old and new batteries together or mix alkaline batteries with other battery types. - When power is disconnected for more than three minutes, all text and formats in the display are lost.
A blank horizontal line appears through the printed label.	There may be some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head with an up-and-down motion.
The label maker has "locked up" (that is, nothing happens when a key is pressed, even though the label maker is on.)	See "Resetting the label maker".
The power turns off when you try to print.	- The batteries may be weak. Replace them with six new AAA alkaline batteries. Do not use old and new batteries together or mix alkaline batteries with other battery types. - Check that you inserted the batteries correctly. - A wrong adapter is used; the recommended adapter is the AD-24ES/AD-24ESA/AD-24ESAW/AD-24ESA-01/AD-24ESAW-01.
The tape does not feed correctly or the tape gets stuck inside the label maker.	- Check that the end of the tape feeds under the tape guides. - The cutter lever is pressed while printing. Do not touch the cutter lever during printing.
To change language setting.	See "Initial Settings".

6 HELPFUL HINTS (continued)

Short Cuts

Language	Menu → Space key
Width	Menu → 1
Label Length	Menu → 2
Margin	Menu → 3
File	Menu → 4
Decorative	Menu → 5
Print Option	Menu → 6
Feed	Menu → 7
Unit	Menu → 8
LCD contrast	Menu → 9

Resetting the label maker

You can reset the label maker when you want to restore it to factory settings, or in the event it is not working correctly. All text, settings and stored files are cleared.

- 1 Turn off the label maker, hold down  and , and then press  to turn the label maker back on.

- 2 First release the power button, and then release  and .

The label maker turns on with the internal memory reset.

Should you encounter any problems with your product, please do not return your product to the store.

After referring to the User's guide, if you still need assistance, contact Brother Customer Service at:

Voice: 1-877-BROTHER

Web: www.brother-usa.com

Fax: 1-901-379-1210

If you need to locate a service center, please call 1-877-BROTHER or visit www.brother-usa.com

CAUTION

USING A COMBINATION OF DIFFERENT BATTERIES (SUCH AS Ni-MH AND ALKALINE), MAY RESULT IN AN EXPLOSION. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.


NOTE

Battery Recommendations

- Remove the batteries if you do not intend to use the label maker for an extended period of time.
- Dispose of the batteries at an appropriate collection point, not in the general waste stream. In addition, be sure to observe all applicable federal, state, and local regulations.
- When storing or discarding the batteries, wrap it (for example with cellophane tape), to prevent it from short-circuiting. (See the picture on the lower right)

(Battery insulation example)

1. Cellophane tape
2. Alkaline or Ni-MH battery

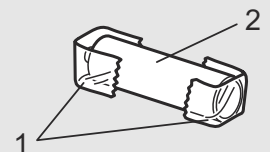

Accented Characters										
A	Á Â Ã Ä Å Æ Æ Å Æ Æ				a	á à â ä æ ã ç å ā ã				
C	Ç Ć Ć		D	Đ Đ		c	ç ċ ċ		d	d' ð đ
E	É Ê Ë Ě Ě Ě Ě Ě				e	é è ê ë ě ě ě ě ě				
G	Ĝ Ĝ		I	Í Î Ï Ĭ Ĭ Ĭ		g	ĝ ĝ		i	í î ï ĭ ĭ ĭ
K	Ķ		L	Ł Ł Ł Ł		k	ķ		l	ł ł ł ł
N	Ñ Ñ Ñ Ñ		R	Ř Ř Ř		n	ñ ñ ñ ñ		r	ř ř ř
O	Ó Ò Ô Ø Ö Õ Æ Õ				o	ó ò ô ø ö õ æ õ				
S	Š Š Š Š Š		T	Ť Ť Þ		s	š š š š š		t	t' ț þ
U	Ú Û Ü Ü Ü Ü				u	ú ù û ü ұ ұ ū ū				
Y	Ý Ÿ		Z	Ž Ž Ž		y	ý ŷ		z	ž ž ž

Font samples			
Helsinki	ABC\$£€39	Florida	ABC\$£€39
Brussels	ABC\$£€39		

Text Label templates					
01		05		08	
02		06		09	
03		07		10	
04					

Pattern Label templates					
01		03		05	
02		04			

Frame designs					
01	Off (No frame)	05		09	
02		06		10	
03		07		11	
04		08		12	
				13	
				14	
				15	
				16	

* Images are only for illustrative purposes.