

Ficha técnica

Epson

Modelos / familias

TM-L90

Fuente del fabricante

TM-L90 User/Technical Guide

https://files.support.epson.com/pdf/pos/bulk/tm-l90_l90_peeler_trg_en_revf.pdf

Las páginas siguientes son un extracto técnico del documento oficial del fabricante.

The printer became inoperative after you change the interface reset signal in the memory switch setting mode	119
Shipping Procedures	120

Appendix

Setting items for Memory Switch Setting Mode	121
Setting items of TM-L90 4** models	121
Setting items of TM-L90 other than 4** models	125
Setting items of TM-L90 Peeler 39* models	126
Setting items of TM-L90 Peeler other than 39* models	128
Product Specifications	130
Product Specifications	130
Print Specifications	133
Reliability	134
Character Specifications	137
Paper Feed Specifications	138
Paper Specifications	138
Printing Area	139
Printing Position in Relation to Cutter Position (TM-L90)	141
Printing Position, Peeling Position, Manual Cutter Position (TM-L90 Peeler Model)	142
Overview of External Dimensions	143
Interface And Connectors	146
RS-232 Serial Interface	146
IEEE1284 Parallel Interface	149
Option Specifications	152
PS-180	152
Consumable Specifications	154
Paper Specification	154
Specified Roll Paper	155
Requirements for Receipt Paper	156
Requirements for Die-Cut Label Paper	157
Requirements for Continuous Label Paper	162
Notes on Paper Handling	164
Character Code Table	165
Page 0 (PC437 : USA, Standard Europe)	165
Page 1 (Katakana)	166
Page 2 (PC850: Multilingual)	167
Page 3 (PC860: Portuguese)	168
Page 4 (PC863: Canadian-French)	169
Page 5 (PC865: Nordic)	170
Page 11 (PC851: Greek)	171
Page 12 (PC853: Turkish)	172
Page 13 (PC857: Turkish)	173
Page 14 (PC737: Greek)	174
Page 15 (ISO8859-7: Greek)	175
Page 16 (WPC1252)	176
Page 17 (PC866: Cyrillic #2)	177
Page 18 (PC852: Latin 2)	178
Page 19 (PC858: Euro)	179
Page 20 (Thai character code 42)	180
Page 21 (Thai character code 11)	181
Page 22 (Thai character code 13)	182
Page 23 (Thai character code 14)	183
Page 24 (Thai character code 16)	184
Page 25 (Thai character code 17)	185
Page 26 (Thai character code 18)	186

Page 30 (TCVN-3: Vietnamese)	187
Page 31 (TCVN-3: Vietnamese)	188
Page 32 (PC720: Arabic)	189
Page 33 (WPC775: Baltic Rim)	190
Page 34 (PC855: Cyrillic)	191
Page 35 (PC861: Icelandic)	192
Page 36 (PC862: Hebrew)	193
Page 37 (PC864: Arabic)	194
Page 38 (PC869: Greek)	195
Page 39 (ISO8859-2: Latin 2)	196
Page 40 (ISO8859-15: Latin 9)	197
Page 41 (PC1098: Farsi)	198
Page 42 (PC1118: Lithuanian)	199
Page 43 (PC1119: Lithuanian)	200
Page 44 (PC1125: Ukrainian)	201
Page 45 (WPC1250: Latin 2)	202
Page 46 (WPC1251: Cyrillic)	203
Page 47 (WPC1253: Greek)	204
Page 48 (WPC1254: Turkish)	205
Page 49 (WPC1255: Hebrew)	206
Page 50 (WPC1256: Arabic)	207
Page 51 (WPC1257: Baltic Rim)	208
Page 52 (WPC1258: Vietnamese)	209
Page 53 (KZ1048: Kazakhstan)	210
Page 255 (Blank page)	211
International Character Set	212

Chapter 1

Product Overview

1.1 Product Structure

1.1.1 Models

❑ Model

	Peeler unit	Power switch
TM-L90 other than 4** models	not mounted	non-locking push button
TM-L90 4** models	not mounted	locker switch
TM-L90 Peeler other than 39* models	mounted	non-locking push button
TM-L90 Peeler 39* models	mounted	locker switch

❑ Interface

- Serial (RS-232C)
- Parallel (IEEE-1284 standard)
- USB (USB2.0)
- Ethernet (10BASE-T/100BASE-T)
- Wireless LAN (IEEE802.11a/b/g/n for TM-L90 4** models, TM-L90 Peeler 39* models)
- Wireless LAN (IEEE802.11b for the other models)

TM-L90 4** models and TM-L90 Peeler 39* models may have the build-in-USB.

1.1.2 Accessories

TM-L90

- ❑ Start Here
- ❑ Label roll paper
- ❑ Manual CD
- ❑ Power switch cover
- ❑ Control panel label used for horizontal installation
- ❑ Paper exit guide for horizontal installation
- ❑ Roll paper spacer

- ☐ Screw for installation of the roll paper spacer
- ☐ Wire saddle*
- ☐ AC adapter*
- ☐ AC cable*

* May not be included depending on the printer model.

TM-L90 Peeler Model

- ☐ Start Here
- ☐ Label roll paper
- ☐ Manual CD
- ☐ Power switch cover
- ☐ Operation label (an instruction label for the peeler open lever and the cover open lever)
- ☐ Roll paper spacer
- ☐ Screw for installation of the roll paper spacer
- ☐ Wire saddle
- ☐ AC adapter *
- ☐ AC cable *


* May not be included depending on the printer model.

1.1.3 Option

- ☐ Affixing tapes (model: DF-10)
- ☐ Wall hanging bracket (model: WH-10)
- ☐ AC adapter PS-180 (PS-180 supports power-saving feature)
- ☐ Power cables

1.2 Name and Description of Each Part

1.2.1 Part Names (TM-L90)

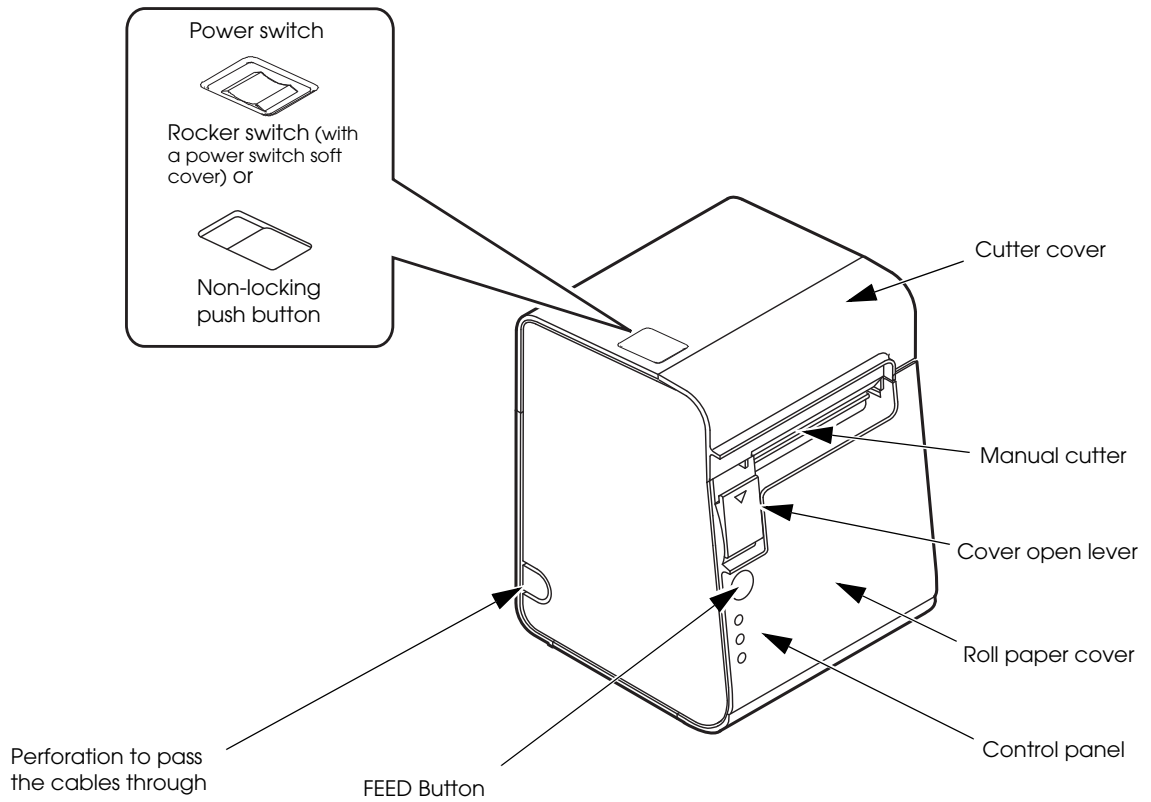

Printer Part Names

* Refer to page 44 for the location of the DIP switches (available only for TM-L90 other than 4** models).